






**Step 5:**

Stand up the door panel in its desired location, keeping the outside of the framing flush with edge of the floor framing. Erect the remaining panels to complete the 12-sided polygon. Fasten the wall panels together with three 3" screws, one at the top, middle and bottom of each wall panel. After all wall panels have been erected nail each section to the floor with two 3" nails. If the panels do not line up properly, check blocking to ensure the floor system is level and that the walls are plumb.

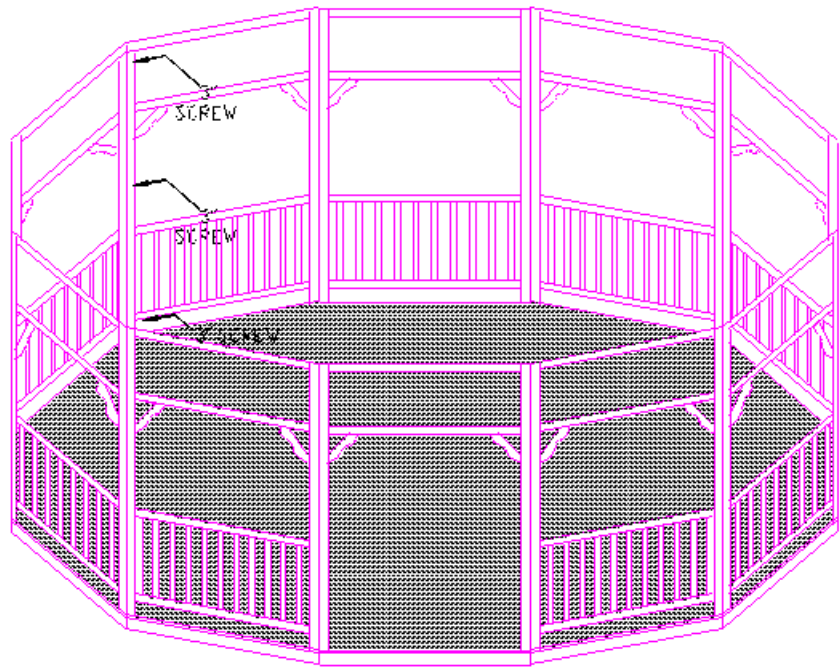

**Step 6:**

Install the lattice panels in the top portion of each wall panel, flush with the outside of the frame. Hang gate level with adjacent wall railings using the hinges and door latch provided, and install them in the locations illustrated below.

