
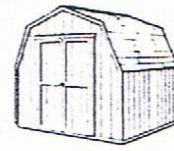


732 Riverview Drive
Fort Frances, ON
P9A 2W3

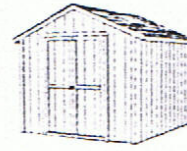

12 x 4 Ez-Build Shed Extension

**You need to purchase 3 more 12' barn hoops for every 4' of extension that you would like to add.

Replace the back wall hoop from the original kit with one of the new hoops move the hoop with the back wall framing to the back of the shed.

Unfold the other hoops and nail on one gusset same as instructions in main kit.

Nail one hoop directly to the last hoop from the main kit face to face with 3" nail on a slight angle doubling up last hoop from main kit.

Use 2x4x48" treated rim board to extend off the existing rim board from main kit, nail through rim board into heel of hoop with 3 1/4" nails.

Add all 2"x4"x21 3/4 blocking to floor in same location as main kit.

Place pre-cut 3/4" treated floor plywood in place and nail with supplied 2" nails.

Place Smart Panel wall siding on walls as explained in main kit using 1 1/2" galvanized nails.

Nail on all pre-cut OSB sheeting in proper locations of roof and nail with 1 1/2" nails.

Install supplied 2"x4"x21 3/4" blocks in place for soffit.

12x4 Ez Build Extension Check Sheet

2-Side Wall Smart Panel 71" x48"

2-Side Fascia 1"x4"x4'

4- Floor Blocking 2"x4"x21³/₄ Treated wood

2- Floor Rim Board 2"x4"x48" Treated wood

3- Pre-Cut ³/₄" 48"x48" Treated Plywood

2- High Roof 45¹/₂"x48" OSB

2- Low Roof 48"x48" OSB

2- Low Roof 24"x48" OSB

2-Overhanng sheets 8"x48" OSB

4-Soffit 2"x4"x21 ³/₄"

2-FLOOR GUSSTS

2-ROOF GUSSETS

PLEASE CHECK THROUGH ALL YOU 12X4 PARTS, IF YOU ARE MISSING OR HAVE ANY DAMAGED PARTS PLEASE CALL

Fax: 807-274-9229

Toll Free:1-800-465-2918

e-mail:sales@nor-fab.com

web page: <http://www.nor-fab.com>